

## DESIGN AND CONSTRUCTION OF UNDERGROUND CABLE (PHYSICAL PLANT)

### CONTENTS

1. GENERAL
2. DESIGN CONSIDERATION
3. SAFETY PRECAUTIONS
4. PROTECTION OF CABLES
5. CABLE LOCATION AND SELECTION OF DUCTS
6. RODDING AND CLEANING DUCTS
7. SETTING UP CABLE REELS AND APPARATUS
8. ATTACHING PULLING LINES
9. INSPECTION OF CABLE
10. FEEDING AND PULLING CABLE
11. PULLING CABLES INTO SUBSIDIARY DUCTS
12. SEALING DUCTS
13. ELECTRICAL PROTECTION AND BONDING
14. PLACING UNDERGROUND LOAD COIL CASES
15. EXHIBITS:

- Figure 1. Typical Layout of Underground Cable Plant Installation  
Figure 2. Typical Manhole Racking Diagram  
Figure 3. Typical Central Office Inside Wall Mounted Cable Racking  
Figure 4. Typical Central Office Cable Vault Wall Mounting Cable Racking  
Figure 5. Typical Cable Plant Manhole Installation Details

#### 1. GENERAL

1.1 This section is intended to provide REA Borrowers, Consulting Engineers, Contractors, and other interested parties with technical information in the design and construction of REA Borrower's telephone systems. It covers in particular considerations for the design and installation of underground cable plant (cable to be placed in conduit and manholes).

1.2 Underground cable plant for REA Borrowers usually will be installed by contract from plans and specifications prepared by a Consulting Engineer. The engineer should detail the following information on the Construction Drawings:

- 1.21 The position of manholes, and building and/or pole riser in relation to streets, roads, buildings, poles, etc.
- 1.22 The distance between manholes (wall-to-wall measurement), manhole to riser pole (wall-to-pole measurement) and manholes to building (wall-to-building measurement).
- 1.23 The conduit configuration, size and type between manholes, manholes to riser poles and manholes to buildings. In addition, the drawings should reflect all existing and proposed cables and the particular duct in which they either exist or are to be placed.
- 1.24 Manhole, cable vault and building cable racking diagrams should be provided and should show the positioning of all existing and proposed cables, cable stubs, and load coil cases. The racking diagrams should also show the rack position at which each particular splice is to be placed, the conduit configurations with the particular cable assignments, cable bonding arrangement and any supporting structures that are necessary.
- 1.25 The Plan should show exact cable (splice-to-splice) cut lengths for all proposed cables to be placed in conduit.
- 1.26 Pole and building cable riser should be detailed to show the splice locations, supporting structures, method of cable attachment and physical protection, if required.
- 1.27 Cable identification, cable type, size, conductor gauge, and pair count should be shown on all existing and proposed cables where there is a change in size, gauge or pair count.
- 1.28 Detailed information should be provided for specialized equipment, such as pressurization blocks, valves, flow meters, compressors, alarms, etc.
- 1.3 The Engineer should keep in mind during the design of underground cable plant that flexibility of the plant depends to a great extent on the physical arrangement of the cables and associated equipment in the underground conduit and manhole system. Correct assignments and arrangements of the underground cable will provide economical advantages by decreasing future costly rearrangements.

## 2. DESIGN CONSIDERATION

- 2.01 The underground cables placed in conduit and manhole systems are considered the backbone of the outside plant facilities. The sizing of cables and the selection of the conductor gauge are determined in accordance with the design principles as detailed in REA TE & CM Sections 204 and 210. It is of utmost importance that cable to be placed in the underground system be sized to economically justify the use of each conduit due to the high cost of providing a conduit and manhole system. Normally, cables that

are considered for placement in the conduit system are exchange feeder cables, trunk exchange cables, toll cables, and special cables such as video, coaxial, etc. The larger size manholes and the greatest number of ducts start at the central office and decrease in manhole size and duct number as the distance increases from the central office. The sizing of exchange feeder cables will normally follow this same pattern.

2.02 Prior to the design layout of underground cable plant, it is necessary for the Engineer to make an on-site field survey of all manholes, pole risers, building conduits, etc.

2.03 A cable racking diagram should be made for the central office vault, cable through, central office building wall (See Figures 2, 3, 4, and 5) showing the location of all existing cables, stubs, load coil cases and ducts in use. Using this information a vacant duct should be selected that will allow new cable to be placed without crossing over existing cable or blocking other vacant ducts. Generally, it is desirable to assign the lower conduits to trunk cables and loaded cable which usually will not require replacement, and also to special cables, such as coaxial, which require protection. The cable duct assignment should be the same in each manhole, whenever possible. However, each duct should be selected section-by-section, since the same relative position in each manhole may not always provide the best cable arrangement.

2.04 Where cables are pulled through a manhole without a splice, the duct selection should be the same at both ends of the manhole. Changes in duct selection, especially in elevation, should be considered carefully to avoid damage to the cable sheath and to keep the pulling tension as low as possible.

2.05 On the manhole cable racking diagram, all necessary additional cable supporting hardware within a manhole should be indicated as should additional work such as drilling holes, etc.

2.06 Actual lengths of the conduit runs are necessary. These measurements can be obtained from the plant-in-place records of the conduit systems. But these measurements should be verified so that cable lengths will be correct. The distance, manhole wall-to-wall, manhole to-riser pole, or manhole to building, should be added to the amount of cable required in each manhole for pulling-in, setting-up, testing, and splicing. These measurements when added together are to be indicated on the Construction Drawing as cable "cut length." The amount of excess cable normally required for splicing, testing and pulling usually amounts to 3 feet per cable end or 6 feet per section.

2.07 For pull-through manholes (no splice), the length of cable necessary for racking should be added to the wall-to-wall lengths of the conduit sections on both sides of the manhole.

2.08 Cables and stubs should be arranged in the manhole to allow accessibility to the cable splices. In general, limit the number of branch cables from the end of mainline splices to two (2). To maintain this arrangement, stubs may be necessary. At locations requiring stubs, the size, gauge, and intended use of the stub usually will determine the racking position. Where stubs are used to connect branch feeder or distribution cables entering the manhole from branch conduits, the terminal end of the stub should be racked on the manhole wall opposite the branch conduit.

2.09 At each splice in central office vaults, throughs or on building walls as well as in manholes the shields of all cables should be bonded together. Detailed information and methods should be shown on the detailed drawings.

2.10 The construction layout drawing should be prepared in detail to show all work activity and information necessary to install the underground cable plant. The layout drawings will also provide the borrower with plant-in-place records upon completion of plant installation.

### 3. SAFETY PRECAUTIONS

3.01 Open manholes should be guarded at all times with a manhole guard or barricade. These and other warning devices should be set up at the manhole before the cover is removed.

3.02 Warning lights as approved by local, state or Federal authorities should be displayed between sunset and sunrise and when required on dark days in accordance with local, State and/or Federal ordinances.

3.03 Material and tools in the vicinity of a manhole should be arranged so that there is no probability of their falling into the manhole or unnecessarily interfering with pedestrian or vehicular traffic.

3.04 Open flames, torches, lighted cigars, cigarettes, or pipes should not be brought near an open manhole, into a cover or tent over a manhole opening, nor into a manhole even though tests indicate that combustible gases are not present.

3.041 Only approved lighting and heating equipment of the type recommended by a reputable manufacturer of this type equipment should be used.

3.042 Connection and disconnection of electric lighting equipment should not be permitted in the manhole.

3.043 Every manhole opened for the first time during the day or reopened after having been closed for any length of time shall be tested to determine whether combustible gases are present. Additional tests should be performed when each work shift changes and at intervals not to

exceed two hours during a particular work shift. When a manhole is covered with a tent or tarpaulin it should be teeted at intervals not to exceed one hour. Manholes should also be tested after the removal of water or duct plugs which could poesibly have permitted the flow of gas into a manhole. Where gases are detected or suspected ventilation of the manhole by forced fresh air equipment should be employed.

#### 4. PROTECTION OF CABLES

4.01 When working in manholes care should be taken to prevent damage to the cables in setting up the pulling apparatus or in placing tools of any kind. Cable should not be stepped upon when entering or leaving the manhole. Special care should be taken when working with the filled type cables especially when the temperature is below approximately 35°F. This type cable becomes more difficult to bend and work as the temperature decreases, and there is a possibility of cable damage at temperatures near 0°F degree.

4.02 Cable reels which are delivered to the work location and are not to be set up immediately for placing operations should be eecursly blocked or secured to a substantial support to prevent rolling.

4.021 Cable reels left along streets or highways overnight should be marked in accordance with local and state regulations. Damage to filled cables and wire is possible at lower temperaturss - refer to paragraph 4.01 for details.

#### 5. CABLE LOCATION AND SELECTION OF DUCTS

5.01 Care should be exercised eo that the cable is placed relative to cable number, count, size, cutting length and gauge in strict accordance with the construction drawings.

5.021 The cut ends of nonfilled cable remaining on a reel after a length of cable has been removed should be sealed with an approved end cap equipped with a pressure testing valve and pressurized with dry air or nitrogen between 8 and 10 psi. Filled cable cut ends should also be sealed with suitable end caps.

5.022 The contractor should maintain a record of the cable placed and of the cable remaining on any reel after a cutting length has been removed.

5.0221 Each reel should have a suitable tag fixed to the outside of each flange indicating the number of feet remaining on the reel. The tag should be updated immediately after a length of cable is removed from the reel.

5.023 The duct assignment for each individual cable for any duct section relative to cable number, count, size, gauge, and cutting length should be specified on the construction drawing. Cable should not be placed in ducts other than those which have been specified nor should the cable be racked in any other manner than is shown on the contract drawings without prior approval of the engineer.

## 6. RODDING AND CLEANING DUCTS

6.01 It is the contractor's responsibility to determine whether ducts designated for occupancy should be rodded and cleaned. The contractor should assume complete responsibility for any difficulties or damage to the cable in placing cable in ducts as indicated in the applicable REA Construction Contract Form 511 specifications.

6.011 In the event there is any question as to whether a duct is satisfactory for use, the contractor should perform the following test prior to placing the cable: A test mandrel or short cable length equal to, or slightly larger in diameter than the cable to be placed should be inserted between two wired lines and pulled through the duct. If the mandrel does not pass through satisfactorily the duct should be rodded and cleaned.

6.012 Ducts suspected or found to contain particles of earth, sand, gravel or other obstructions should be cleaned by pulling a stiff bristled wire brush through each conduit as required.

6.013 Ducts which are found to be obstructed by foreign material which cannot be removed should be reported to the engineer without delay. The engineer will determine what action must be taken.

## 7. SETTING UP CABLE REELS AND APPARATUS

7.01 Prior to setting up a cable reel the contractor should check the reel number, cable pair size and gauge and the cutting length with the information contained on the construction drawings, against the verified distance of the manhole to manhole center to center distance.

7.02 Careful control should be exercised in the movement of cable reels. Where it is necessary to roll a reel to a desired location it should be rolled in the direction indicated by the arrows painted on the reel flanges. The reel should not be permitted to tilt. A substantial runway of heavy planks should be employed where uneven ground conditions may cause the reel to tilt. Where it is necessary to move a reel of cable with a construction truck a CT cable reel sling or equal should be used.

7.03 In conduit sections containing curves the cable reel should be set up at the manhole nearer the curve unless traffic or other conditions do not permit.

7.04 Cable reels should be set up on the same side of the manhole as the conduit section in which the cable is to be placed. The reel should be made level and brought into proper alignment with the conduit section so that the cable may be passed from the top of the reel in a long smooth bend into the duct without twisting. This is of utmost importance in handling the filled type cable in temperature ranges of 35 degrees and lower. Under no circumstances should the cable be pulled from the bottom of a reel.

7.05 Adjacent turns of cable on the reel should not be permitted to stick together and cause binding as the cable is payed off the reel. Feed the cable by rotating the reel manually.

## 8. ATTACHING PULLING LINES

8.01 Cables to be placed in conduit runs should be ordered by cut lengths (manhole to manhole center to center distances plus additional length required for racking and splicing) with factory equipped pulling in eyes which should be used for attaching the winch line to the cable. All cables of 1.25 inches diameter and larger to be pulled into conduit runs should use factory eyes. These are available from the cable manufacturers. All cables of smaller diameters than 1.25 inch diameters to be pulled into conduit runs should have the heat shrinkable end caps placed on the cable ends and then use cable grips. Rings to prevent the grip from slipping should not be beaten into the cable sheath. THESE METHODS OF PULLING CABLE INTO CONDUIT RUNS APPLIES TO BOTH THE NONFILLED AND FILLED TYPE CABLES. "B" swivel of 3/4 inch links will be used between the pulling-in eyes and the pulling strand.

## 9. INSPECTION OF CABLE

9.01 All nonfilled cables to be placed in a conduit section should be pressurized to a static pressure of  $12 \pm 2$  psig prior to placement. If the cable does not hold the pressure for a period of six hours the cable should not be placed. Each cable should be jointly inspected by the contractor and the engineer at least two hours after placement to determine that the cable has retained its pressure. If there is a loss of pressure, the contractor should recharge the cable to  $12 \pm 2$  psig. Unless the cable holds the recharged pressure for six hours, the contractor should replace the cable.

## 10. FEEDING AND PULLING CABLES

10.01 A cable feeder guide of suitable dimensions (the cable may not bend at any location to a radius less than 10 times the diameter of the cable outside dimensions) should be used between the cable reel and the face of the duct to protect the cable and guide it into the duct as it is payed off the reel.

10.02 As the cable is payed off the reel it should be carefully watched and inspected for sheath defects. If defects are noticed, the pulling operation should be stopped immediately and the engineer promptly notified of this defect. Kinks and/or other irregularities in the cable sheath should be removed or corrected as directed by the engineer.

10.03 The mechanical stress placed upon a cable during installation should not be such that the cable is excessively twisted, stretched or flexed. Such treatment not only weakens the cable but has an unfavorable effect on its electrical properties. It is therefore of utmost importance that the Engineer determine before cables are pulled into ducts or conduits the maximum tensions that will be allowed to make the installation. One of the most important factors to consider is the coefficient of friction values between the various types of duct material and the cable pulling tensions which in turn, is the deciding factor for selecting of maximum cable lengths to be placed.

Table I outlines the coefficient of friction values when using either high or low density cable jacketing material with the various types of conduit. Low density cable jacketing is the more commonly used. The data reflected in Table I is based upon conduit with clean surfaces. The coefficient of friction increases significantly if the conduit material is dirty. It is therefore of utmost importance that conduit must be cleaned prior to the installation of cable.

TABLE I

TYPE OF CONDUIT	Coefficient of Friction (Sliding)			
	High Dsn.		Low Dsn.	
	Poly. Jacket		Poly. Jacket	
	Cable Dry	Lubricated	Cables Dry	Lubricated
Polyvinyl Chloride (PVC)	0.312	0.131	0.363	0.155
Vitreous Tile	0.244	0.175	0.368	0.186
Black Fiber	0.282	0.175	0.449	0.220
Concrete Asbestos	0.422	0.220	0.479	0.209
Concrete	0.483	0.367	0.571	0.410
Corrugated Plastic	0.220	0.130	0.396	0.130
Wood (Cresosote)	0.571	0.280	0.543	0.220

Values are given for dry and lubricated cables as would be encountered in the field. The figures show that lubricated coefficient of friction values are almost one half or less of those for a dry cable, allowing lesser tensions to be developed and longer cable lengths that can be pulled. For purposes of safety regarding pulling tensions of this cable,



the dry coefficient of friction value should be used to do preliminary tension and length calculations. The effectiveness of a lubricant is dependent to a large extent on the thoroughness of application. In addition, the surface condition of the conduit relative to being dirt free, as previously mentioned, contributes significantly to the actual coefficient of friction.

10.031 The length of cable that may be safely pulled into a duct system depends on the following factors:

1. Size and type of conductor, e.g., copper or aluminum.
2. Maximum pulling strain allowed on conductors.
3. Method of pulling cable (pulling eye, basket weave grip, core hitch, etc.).
4. Number of bends in conduit.
5. Radius of bends.
6. Bend angle.
7. Coefficient of friction.
8. Cable pulled dry or lubricated.

Once a cable route has been tentatively determined and the size and types of cables selected, preliminary calculations of cable length and tensions can be made to aid in the placement of manholes and other termination points. Often the termination or distribution points of the cable are predetermined because of service needs and territorial boundaries. Prior planning and preliminary figuring can often arrange these points to substantiate the following cost savings as a direct result of using longer lengths: 1. Reduced splicing costs; 2. Fewer manholes; 3. Reduced reel handling charges and set-up costs; 4. Fewer pulling eye charges; 5. Fewer reel length pressurization charges in the case of air core cable.

10.032 In order to successfully pull a length of cable into a duct system without injury or strain to it, the maximum allowable pulling tension must be determined. To find this value for cable equipped with factory applied pulling eyes, the following is used:

$T = ANK$  (equation 1) where;  $T$  = Maximum allowable pull.  
 $A$  = Cross sectional area of conductors (cir. mils);  $N$   
 tors terminated in pulling eye (only  $\frac{1}{2}$  of the total c  
 cable are terminated in a factory equipped pulling ey  
 depending on conductor material ( $K = 0.008$  lbs./cir.  
 or  $\frac{3}{4}$  hard aluminum).

To determine A:

Conductor Size (AWG)	Area (Cir. Mils)
19	1290
22	642
24	404
26	254

This equation is used to determine the absolute value of maximum allowable pulling tension for any type of communications cable regardless of shield and jacket design.

Example: Determine maximum allowable pulling tension for a 900 pair, 24 gauge cable.

$$T = ANK$$

$$T = 404 \times 900 \times 0.008$$

$$T = 2909 \text{ lbs.}$$

10.033 Having determined the maximum cable pulling tension, the maximum allowable pulling length for the same type of cable can be calculated utilizing the maximum pulling tension from the following equation:

$$L = \frac{T}{WF} \quad (\text{equation 2})$$

L = Maximum allowable pulling tension (ft.)  
T = Maximum allowable pulling tension (lbs.)  
W = Weight of cable (lbs/ft)  
F = Coefficient of friction (for duct type)

Example: What length of 900 pair, 24 gauge PIC cable can be pulled into PVC conduit with no conduit bends and the cable equipped with a factory applied pulling eye?

$$L = \frac{T}{WF}$$

$$T = 2909 \text{ (lbs)}$$

$$W = 3.34 \text{ (lbs/ft)}$$

$$F = 0.363$$

$$L = \frac{2909}{3.34 (0.363)}$$

$$L = 2399 \text{ ft.}$$

If the same pull were made using cable lubricant the value "F" would be 0.155 and the solution would be:


$$L = \frac{T}{WF}$$

$$L = \frac{2909}{3.34 (0.155)}$$

$$L = 5619 \text{ ft.}$$

The use of lubricant more than doubles the maximum allowable pulling length.

10.034 The effect of bends in duct systems on the pulling tensions of cable is substantial and should be so considered in the design of conduit and manhole systems. A hypothetical solution which will give a general knowledge of the effect of conduit bends on pulling tensions is as follows: (Refer to Figure schematic of duct route to be discussed.)

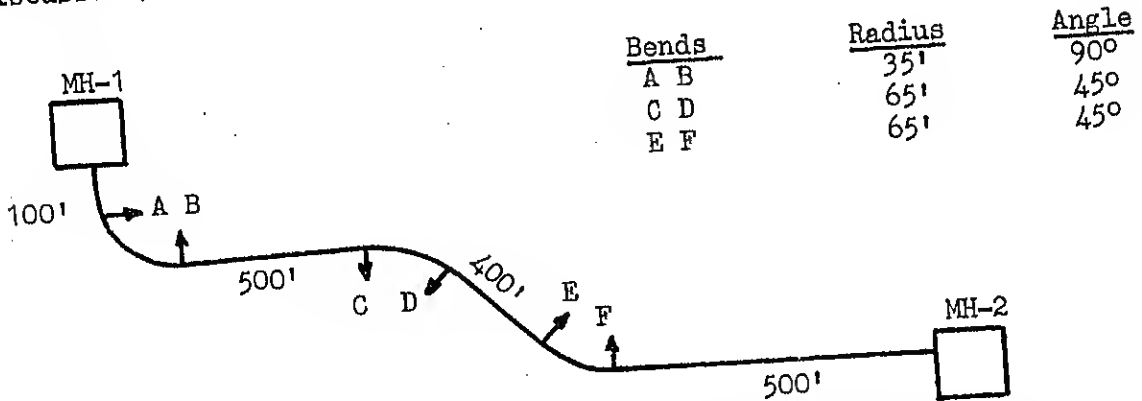

The cable to be considered is a 900 pair 24 gauge PIC. The standard reel length is 1500'. The cable has a low density outer jacket and the conduit is PVC. Pulling tensions for a duct system with bends are calculated on a cumulative basis using the following equations:

$$T = 1 wf \text{ (equation 3)} \quad T = T_1 e^{fa} \text{ (equation 4)}$$

- $T$  = Pulling Tension (lbs)
- $l$  = Length of cable (ft)
- $W$  = Weight of cable (lb/ft)
- $F$  = Coefficient of friction between duct and cable.
- $T$  = Pulling Tension (lbs)
- $T_1$  = Accumulated tension to start of bend.
- $e$  = Base of natural or Napierian logarithms (constant = 2.718)
- $f$  = Coefficient of friction between duct and cable.
- $a$  = Bend angle in radians (1 radian = 57.3 degrees)

The tension at point MH-2 is found by beginning at the conduit MH-1 and finding the accumulated tension.

Equation (3) is used to find the tension from

Manhole 1 to point A

$$T = 1 Wf = 100 \times 3.34 \times 0.373 = 124.7$$

Point A to Point B is found by using

$$T = T_1 e^{fa} = 124.7 (0.363 \times 1.57) = 72.1$$

Accumulative tension to point B = 121 lbs + 61 lbs. = 182 lbs.

The tension of the 500 foot section is then added to find the tension to point C:  $T = 182 + (500 \times 3.34 \times 0.363) = 788 \text{ lbs.}$

Tension at point D:  $65e^{(.363 \times .79)} + 788 = 874 \text{ lbs.}$

Tension of the 400 foot section is then added to the tension to point D:  $T = 874 + (400 \times 3.34 \times 0.363) = 1359 \text{ lbs.}$

The tension at point F:  $T = 65e^{(0.363 \times 0.79)} + 1359 = 1445 \text{ lbs.}$

The tension of the 500 foot section is then added to the tension at point F:  $T = 1445 + (500 \times 3.34 \times 0.363) = 2051 \text{ lbs.}$

It is therefore determined that it requires 2051 lbs of pulling tension to pull a 900 pair 24 gauge PIC cable from MH-1 to MH-2. A reference to the maximum pulling tension that may be applied to a 900 pair 24 gauge PIC cable as calculated in paragraph 10.032, it is noted to be 2909 lbs. The cable can therefore be pulled from MH-1 to MH-2 without exceeding the maximum allowable pulling tension. In the equation number 4, as the maximum allowable pulling tension. In the equation number 4, as shown on page 11, calculations in anglss instead of radians may be used and converted to base "10" from "e" as follows:

$T = T_1 e^{fa}$ , where  $a = \text{angle in radians since a degree} = 0.017453 \text{ radians and the exponent factor to convert from}$

$1_n$  to  $\log_{10}$  is 0.43429

Then the exponent conversion is  $0.43429 \times 0.01745 = 0.00758$

Substituted in the formula number 4, page 11 gives:

$T = T_1 10^{0.00758fa}$  where  $a = \text{angle in degrees.}$

Since the pulling calculation was made for unlubricated cable, use of lubrication will provide a substantial safety margin.

10.035 Another factor to be considered and never exceeded is the maximum allowable sidewall pressure. Side wall pressure is the radial force exerted on the sheath of a cable at a bend point when the cable is under tension. The side wall pressure acting upon a cable at any bend may be estimated from the following equation:

$P = T/R$  (equation 5)

$P = \text{Sidewall pressure (lbs/ft)}$

$T = \text{Pulling tension (lbs)}$

$R = \text{Radius of bends (ft)}$

The maximum allowable side wall pressure for telephone cable should not exceed 100 lbs/ft. In such cases of multiple bends, the greatest tension will be developed through the last bend, as will the greatest side wall pressure. The following calculations display the side wall pressure developed for the figure conduit system diagrammed on page 11.

$$\begin{aligned}\text{Bend A B, } P &= T/R = 214/35 = 6.1 \text{ lbs/ft} \\ \text{Bend C D, } P &= T/R = 1093/65 = 16.8 \text{ lbs/ft} \\ \text{Bend E F, } P &= T/R = 2102/65 = 32.3 \text{ lbs/ft}\end{aligned}$$

10.041 Cables should be lubricated with "B" or "C" cable lubricant as they are payed off the reel into the cable feeder. A cable lubricator (funnel) should be placed around the cable just ahead of the cable feeder to facilitate proper lubrication of the cable.

#### WARNING

UNDER NO CIRCUMSTANCES SHOULD OTHER CABLE LUBRICANTS BE USED. SOAP LUBRICANTS OR LUBRICANTS CONTAINING SOAP ARE DEFINITELY HARMFUL TO POLYETHYLENE SHEATHED CABLE.

10.041 The quantities of B or C cable lubricant which should be used in cable placing operations are indicated in the following table:

Cable Size (Outside diameter) In inches	Quantity of Lubricant Pounds per 100 feet of cable	
	*Normal Pulls	Long Pulls & Pull through
Less than 1 3/8 inches	5 lbs.	10 lbs.
1 3/8 inches to 2 inches	7.5 lbs.	12.5 lbs.
Larger than 2 inches	10 lbs.	15 lbs.

\* Lubrication of the polyethylene sheath is not required in lengths shorter than 300 feet provided the conduit section is free from sharp bends.

10.042 After the cable has been placed the exposed cable in the manholes should be wiped clean of cable lubricant with a cloth before leaving the manhole.

10.05 Cable placed in conduit should be pulled without interruption. All equipment should be carefully checked to insure that it is properly set up prior to beginning the pulling operation, in order to minimize interruption once pulling has started. Insofar as possible, the cable should be pulled without interruption until the required amount of cable is into the manhole. The cable should be pulled at the rate of 90 to 100 feet per minute.

10.051 Careful attention should be paid to signals as the cable is being pulled so that pulling may be stopped instantly whenever necessary to avoid damage to the cable.

10.052 If for any reason the pulling operation is halted between manholes, the winch operator should not release the tension on the winch unless directed to do so. In restarting the pulling operation, the inertia of the cable should be overcome by gradually increasing the tension in steps a few seconds apart until the cable once again is in motion.

10.06 Long lengths and pull-through cables should be adequately lubricated by increasing the amount of B or C lubricant by five (5) pounds per 100 feet as indicated in paragraph 10.041. The leading end of the cable at intermediate manholes should be guided into the duct and a feeder tube nozzle placed around the cable to prevent the cable from rubbing on the edge of the duct. To maintain pressure on the sealing gasket of the pulling eye of polyethylene cables, so equipped, the pulling eye nut should be retightened at each intermediate manhole.

10.07 Sufficient cable should be left in each manhole to properly rack and splice the cables as shown in the contract drawings. All pulled ends should be examined for evidence of damage due to the pulling operation. The cable sheath should not be pulled beyond the cable core. Notification to the engineer should be made for inspection, and repair action that should be taken where cracks or openings are found in the cable sheath following the pulling operations. Repairs should be made in accordance with the REA Splicing Standard PC-2.

NOTE: Cable ends should be kept sealed at all times. Only REA accepted cable end caps may be used for this purpose.

10.08 After the cables have been placed, the cable ends in all manholes should be temporarily secured to the cable racks to prevent damage. Any bending of the cable sheath should be accomplished in such a manner as to avoid possible injury to the cable sheath. Excessive lengths of cable in the manhole should be looped around the manhole in long sweeping bends and tied securely in a location where it will not obstruct the working space in the manhole. The cable ends should be so placed that they are high, close to the manhole roof.

10.09 Duct seals acceptable to REA, should be placed around the cable in the ends of each duct section when the ends of the duct are broken or are in such condition that sheath damage appears likely; where cables are installed in metal pipe conduit.

10.10 After the cables are placed, each cable should be identified on each end of a splice with identification tags indicating the cable number, pair count, size, and gauge, and also the cut length.

10.11 Splices should not be placed or pulled into the duct (duct splices) but should be positioned within the manholes.

10.12 Where filled type cables are to be spliced to a pressurized cable, a cable stub with an installed in-line pressure block should be placed between the filled cable and the pressurized cable.

## 11. PULLING CABLES INTO SUBSIDIARY DUCTS

11.01 When placing cable in a subsidiary duct extending from a manhole, service manhole or vault to a pole riser, or to a building, the cable reel should be located at the end of the duct nearest the bend. The cable should be fed in a long smooth curve rather than be pulled upward around the bend from the opposite end.

11.02 Due to the number of bends usually encountered in subsidiary conducts, B or C cable lubricant should be used to facilitate placement of the cable regardless of the conduit lengths.

11.03 Sufficient cable should be left at each end of the duct to permit setting-up and splicing. The cable should be lashed temporarily to the pole or wall with houseline to insure that it does not interfere with other activities, become a safety hazard in work areas or come into contact with electrical power service.

## 12. SEALING DUCTS

12.01 The ends of all ducts whether specified for occupancy or to remain vacant should be sealed to prevent the entrance of foreign materials and to protect against gas and water entering buildings. The type of duct seal to be used is shown in the "List of Materials Acceptable for Use on Telephone Systems of REA Borrowers."

## 13. ELECTRICAL PROTECTION AND BONDING

13.01 In general all underground cable shields should be bonded together at each manhole, cable vault, underground dips, underground to aerial junctions and at other locations as may be specified on the construction drawing.

13.011 Central Office The shields of all cables entering the central office should be bonded together and connected to the central office ground with a #6 AWG or larger ground wire. The bonds should be connected to the cable shields in the cable vault or trough as near the cable entrance as is practicable and/or as specified on the construction drawings. Where a suitable ground cannot be reached conveniently, it may be desirable to establish a ground by running a strip of bonding ribbon the length of the vault frame above the top horizontal support. The bonding ribbon can be secured with wire ties spaced approximately three feet apart. This bonding ribbon should be mechanically fastened to the central office ground lead which is terminated in the vault. As each cable is installed, the ground connections can then be made conveniently by bonding the splice enclosure to the above bonding ribbon where they cross.

13.012 Manholes The shields of all cables in each manhole should be bonded together by placing a bonding wire or ribbon as described in section 13.011. At intermediate manholes where the cable is pulled through without a sheath opening, bonds are not required.

13.013 Building Entrances All cable should be bonded and/or grounded as close to the building entrance as possible. Generally a No. 6 or larger ground wire is run from the cable shield, or splice enclosure to a permanent and convenient pipe in the cold water system. A bond should be placed between the metallic conduit and/or cast iron bend and the metallic shield of the cable or aerial cable suspension strand at each end of an underground dip and at underground aerial cable junctions.


#### 14. PLACING UNDERGROUND LOAD COIL CASES

14.01 The construction drawing should indicate where the case should be located:

- a. placed on the floor of the manhole in a vertical position
- b. placed on its side
- c. attached to the wall or
- d. buried in the floor of the manhole




- 14.011 In line manholes the cases will generally be attached to the end wall or stood on the floor.

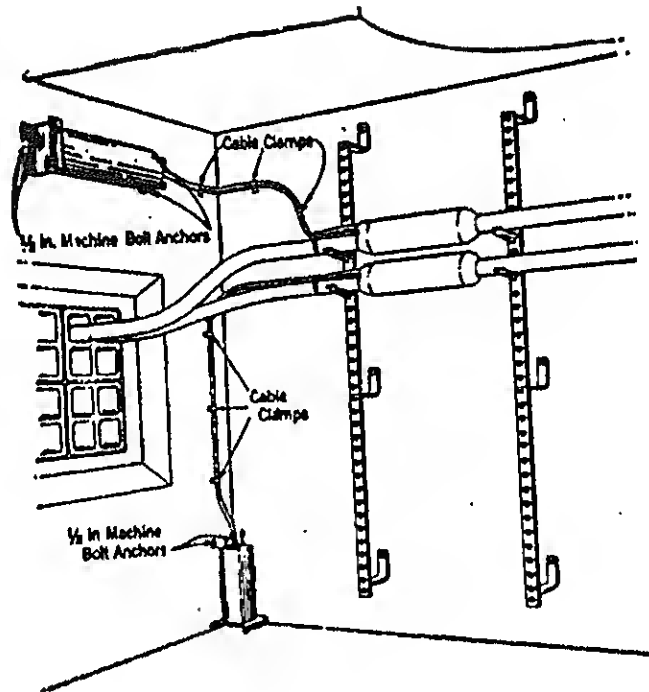


At some locations where the available wall space is completely occupied, it may be necessary to place the case on its side at one end of the manhole. If the loading case must be installed in the manhole floor, the stub should be arranged as indicated in the drawing below.



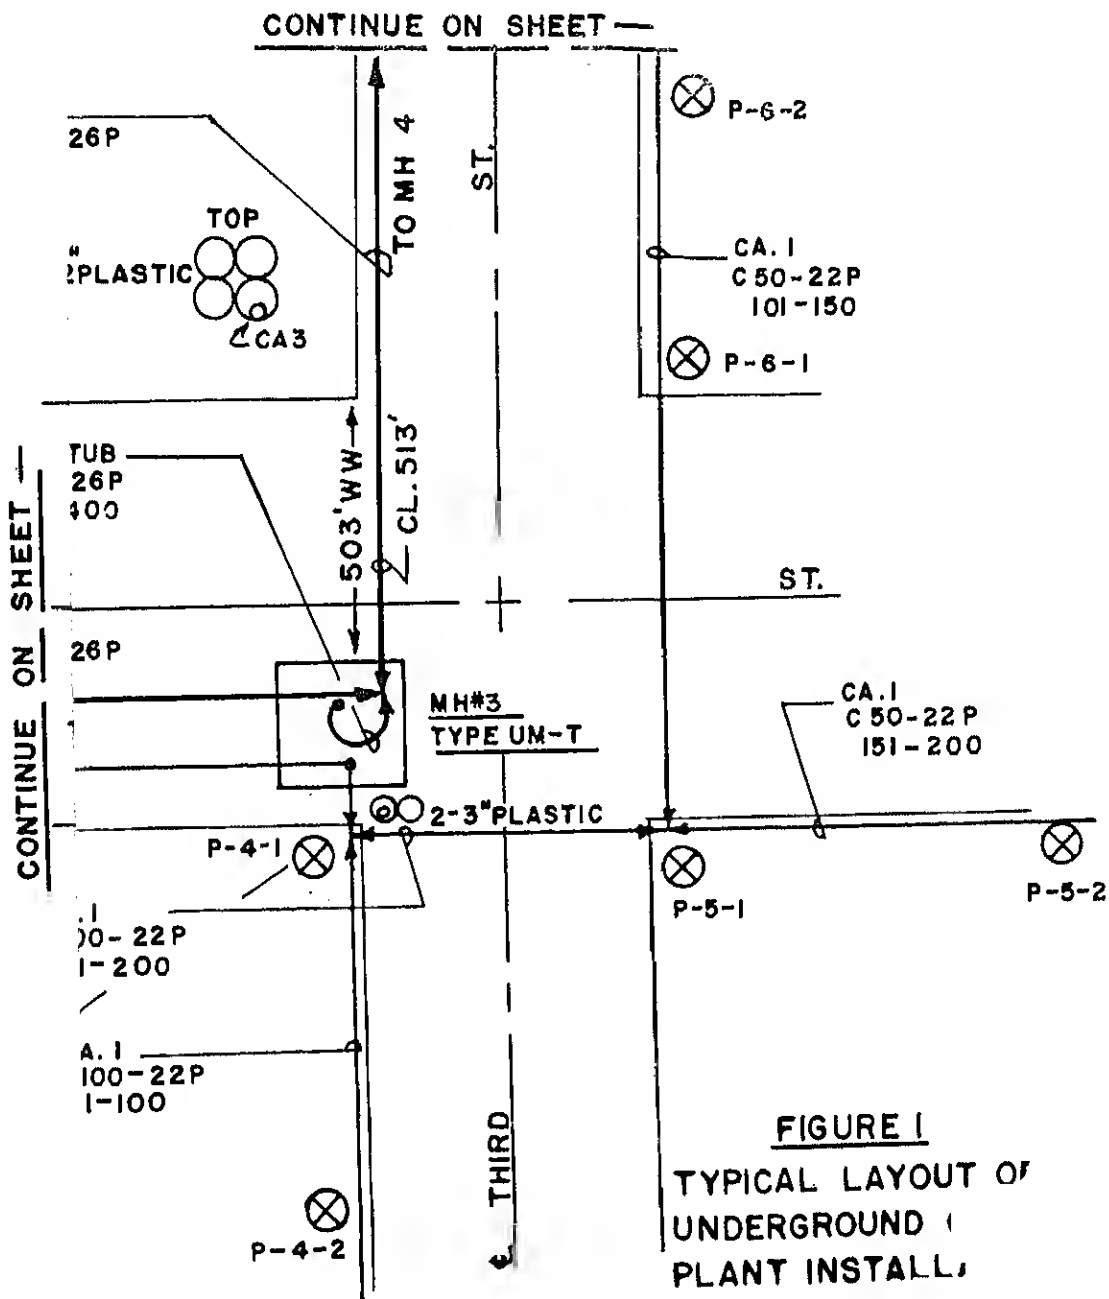

**FIGURE 1**  
TYPICAL LAYOUT OF  
UNDERGROUND  
PLANT INSTALL.



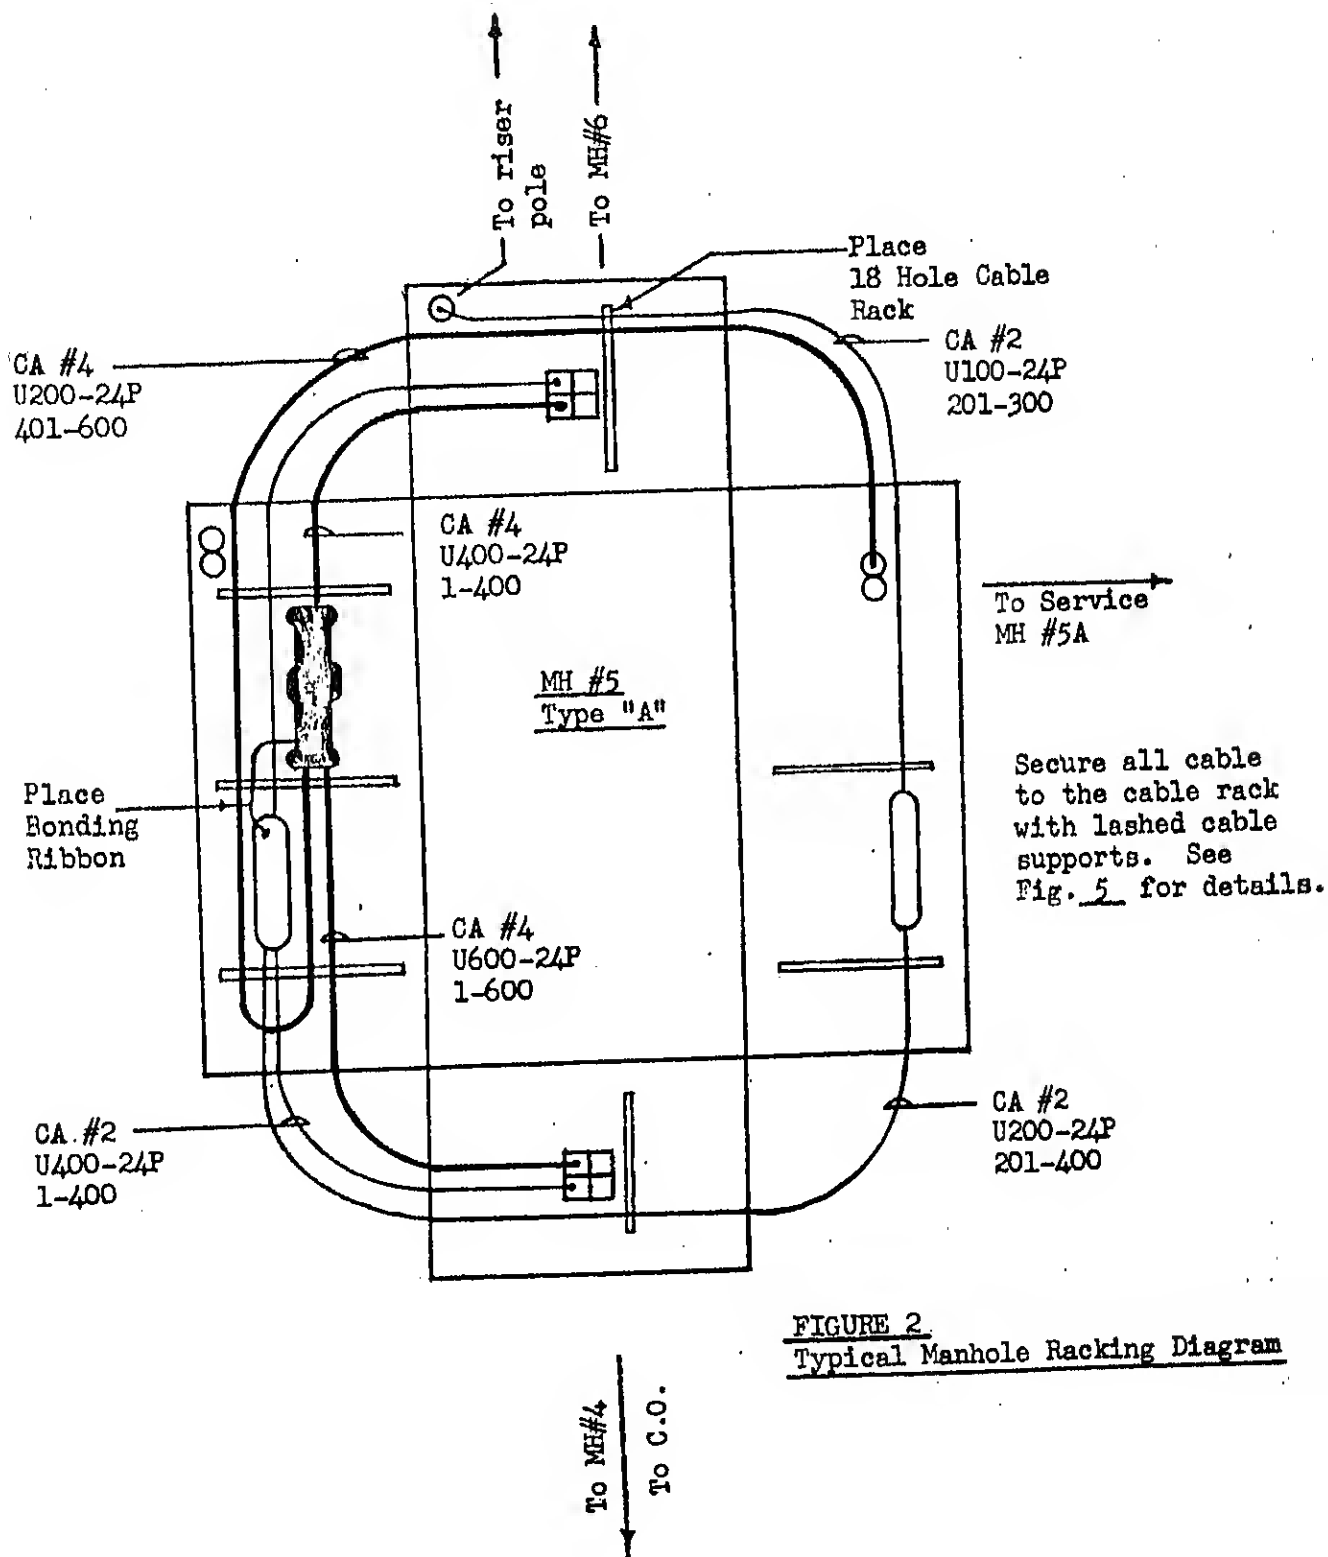

**FIGURE 2**  
Typical Manhole Racking Diagram

Equipment Overhead Rack

#6 Copper Bonded to  
Grounding Bus on MDF.

Solder  
Bridge or  
Clamp

Unistrut  
(or equal)  
Column and Rails

All Cables Shall Be  
Tagged on Both Sides  
of The Splice. See  
Fig. 5 for details


Clamp Cable to Rails  
with Unistrut (or equal)  
Cable Clamps

24"±  
30"  
24"±


After Cable Installa-  
tion Seal Risers with  
Water Plug or Plaster  
of Paris


Keep All Vacant  
Risers Capped

To MH-1

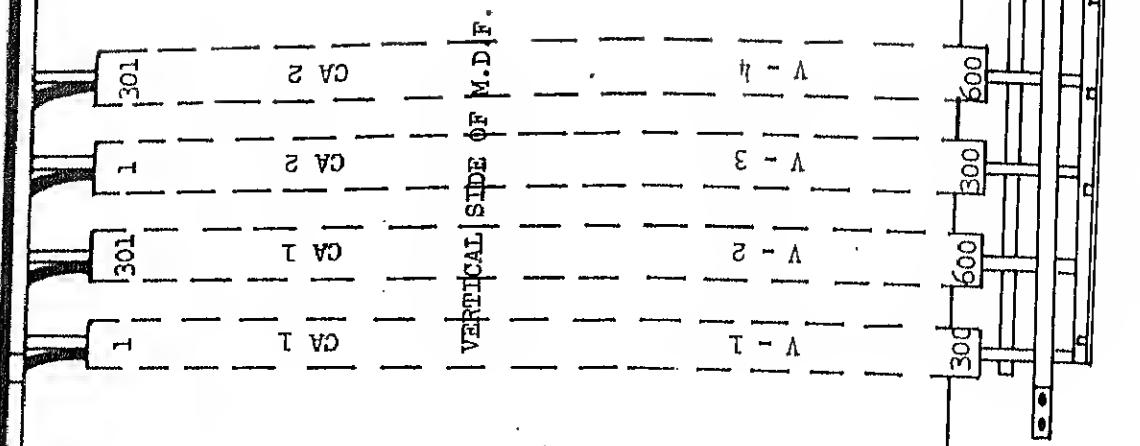


16 CU GRD. WIRE  
OR BONDING RIBBON  
to M.D.F. BUS BAR-

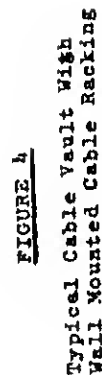

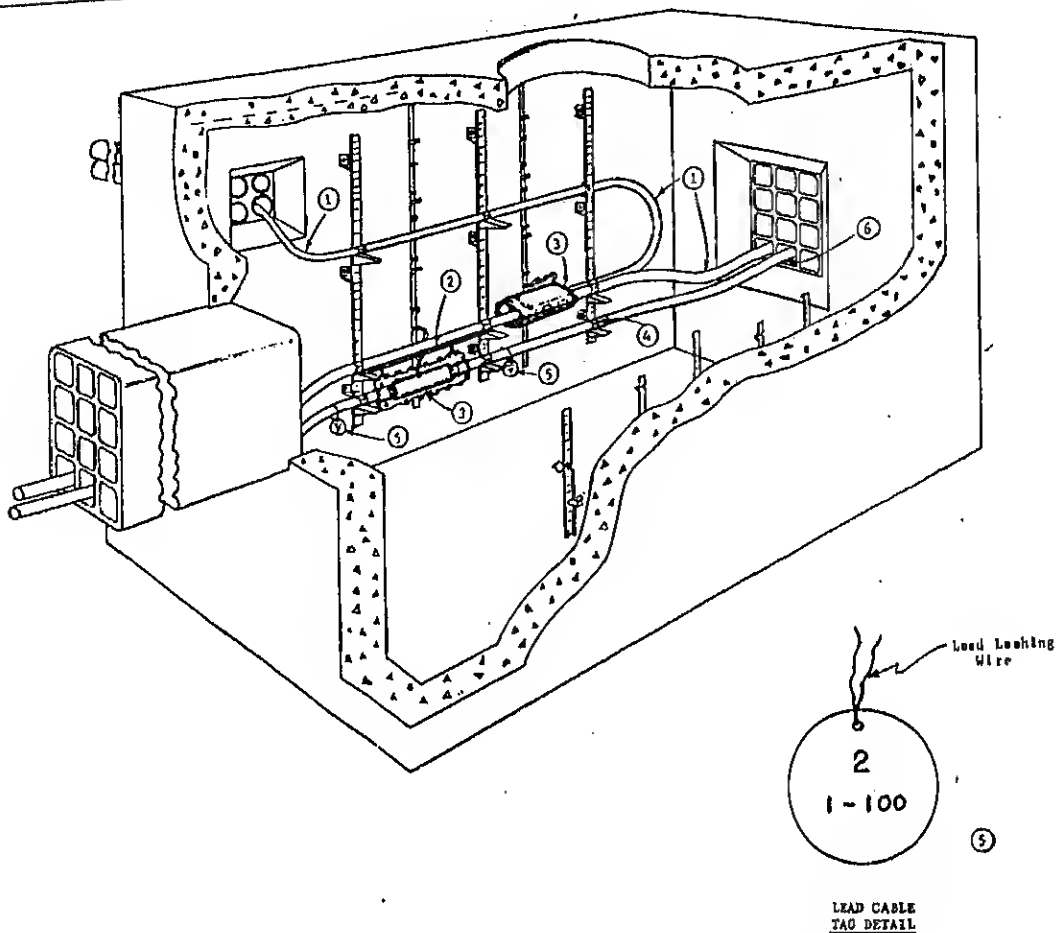

NOTES:

- ① Extreme care shall be used in the forming of cable(s) to prevent kinking. Cables shall not be formed to a radius of less than ten times the diameter of the cable.
- ② Cast iron splice cases must be supported by the cable racks to prevent cable damage. It is suggested that a 1/2" or 3/4" galvanized iron pipe be used for this support and installed as indicated on the drawing.
- ③ All splice enclosures shall be bonded together. The method of bonding will be in accordance with instructions issued by the Engineer.
- ④ All cables shall be secured to the cable racks with lashed cable supports.
- ⑤ Lead cable tags showing the cable identification and pair count shall be placed on the cable(s) on both sides of splice.
- ⑥ Install duct seals or plugs as required.

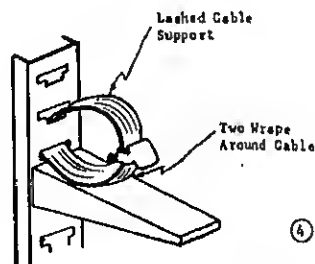

ATTACHMENT OF CABLE SUPPORT  
TO MANHOLE CABLE RACK

FIGURE 5  
Typical Underground Cable Recking  
In Manholes